

# Eildon Systems

## QRD initial set-up instructions

**Model : C/M130 with AQL**

Top line switch setting   **0200 0000**

Bottom line switch setting **0030 0000**

### OPERATION

INSTALL COMPLETE QRD

RESET QRD CHECKMATE TERMINAL

CHECK MODEL SWITCH SETTING

SWITCH OFF

### Action

FOLLOW ATTACHED DIAGRAM  
CONNECT TO MAINS POWER (230 VAC)

INSERT REMOTE INPUT SWITCH INTO SOCKET CLOSEST  
TO THE POWER CABLE.

HOLD DOWN REMOTE INPUT SWITCH BUTTON. PUSH  
"PAPER CLIP", OR SIMILAR OBJECT, THROUGH SMALL  
HOLE ON FRONT OF CHECKMATE. (RIGHT SIDE OF  
KEYPAD).

THE CHECKMATE DISPLAY WILL RESET TO 00099 AT  
BOTTOM LEFT. PRESS ENTER.

THE DISPLAY WILL THEN SHOW 0.202.

HOLD DOWN CURSOR AND ENTER KEYS.  
THE DISPLAY SHOULD NOW READ AS ABOVE.

HOLD DOWN 1, PRESS RED.

THE QRD IS NOW READY FOR USE.

**NOTE:** WHEN FIRST POWERED UP THE LARGE ELECTRONIC DISPLAY WILL AUTOMATICALLY RUN THROUGH A TEST ROUTINE. IT WILL ONLY DISPLAY THE ACTUAL, TARGET AND EFFICIENCY FIGURES IF THE QRD CHECKMATE IS TURNED ON. WHEN THE QRD CHECKMATE IS TURNED OFF AT NIGHT, OR STOPS TRANSMITTING, THE LARGE DISPLAY WILL BLANK OUT.